## **DELL PREMIER RECHARGEABLE ACTIVE PEN 7522W**

## Customizable functions for Top Button (Single/Double/Long press):

Disabled OneNote Ink Workspace Microsoft Whiteboard **Sticky Notes** Snip & Sketch Screen snipping **Keystrokes** Page up Page down Play/pause Next track Previous track Volume Up Volume down Mute Windows search Defined by system Open/Run Cortana (only long press)

## **Customizable functions for Side Buttons**

Radial menu Erase **Barrel** button **Open/Run** Keystroke Cortana Windows Search OneNote Page up Page down Go Back Go forward Copy Paste Undo Redo Switch application Web browser E-mail Play Pause Next track **Previous Track** Volume up Volume Down Mute Left Click Middle Click **Right Click** 4th Click 5th Click Disable

